



Note:

Remove panelling for instrument panel,
see gr. 51

Disconnect Bowden cable on accelerator-lever shaft.

Installation:

Check rubber grommet, replacing if necessary.

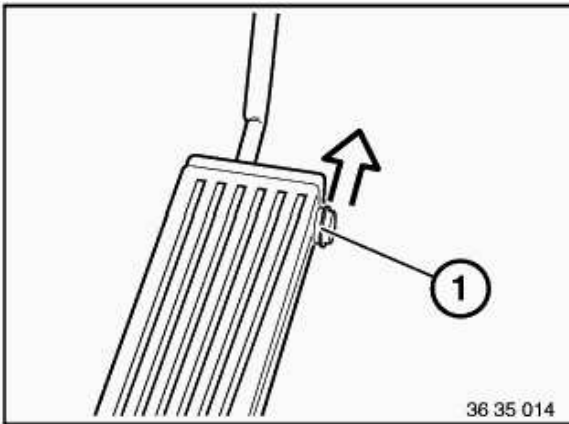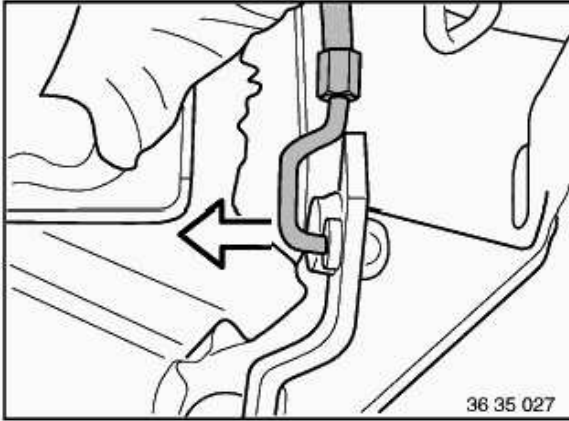


Press off locking washer (1).

Disconnect pedal.

Installation:


Grease anti-friction faces,
refer to Technical Data

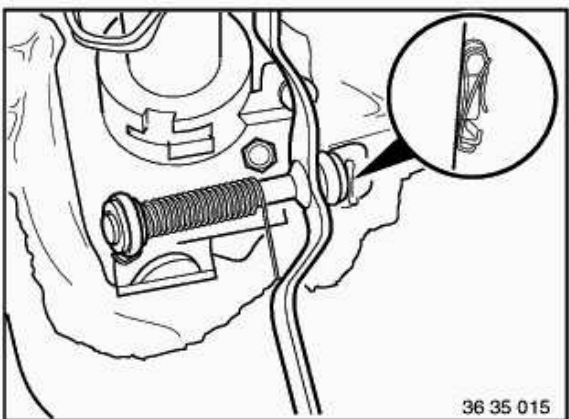

Take off locking clip.


Installation:

Check for correct seating of locking clip.

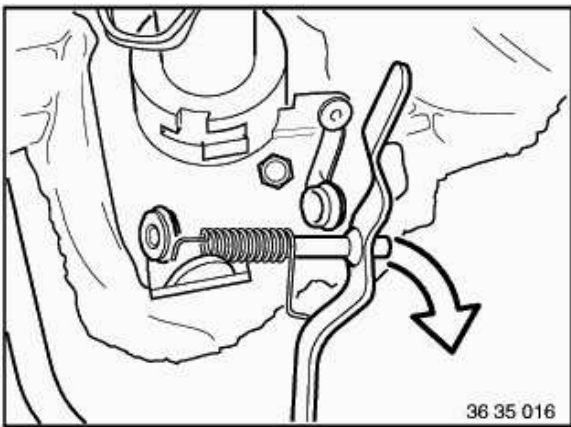

Disconnect return spring.

Slide accelerator-lever shaft to the left and remove.

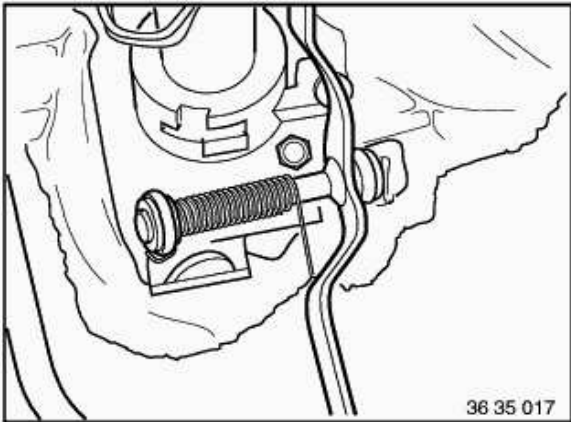

Installation:

Check for correct installation position of return spring.