

51 16 360 Removing and installing glovebox, right (Z3 Roadster, M Roadster, Z3 Coupé, M Coupé)

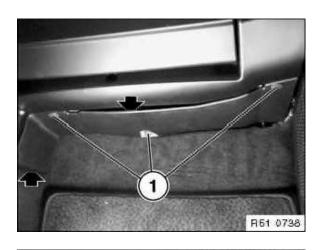

Release rotary clips (1) at bottom and lever out lower trim panel on left (risk of damage) and center.

Open glove compartment cover. Lift out finisher strips (1) and unfasten screws.

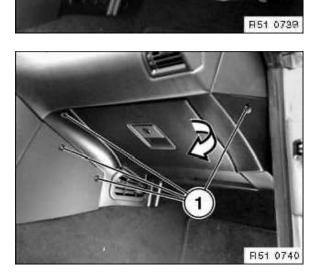

Close glove compartment cover. Lift out finisher strips (1) and unfasten screws. Remove glove

compartment outward/downward.